



Commercial EV Charger

OCPP Configuration Tools User Manual



ATG Electronics, Inc.

10588 Monte Vista Ave, Montclair, CA 91763

+1-951-245-6222

service@atgelectronics.com

<https://www.atgelectronics.com/>



Table Of Contents

1. Connection Instruction.....	01
2. Software Instruction.....	04




Please scan the QR code to download
and install the latest version of the EV Charger
OCPP Configuration App.

Connection Instruction



Connect to the EV Charger by using bluetooth protocol through the App.

1 Start the EV Charger

2 Open the App

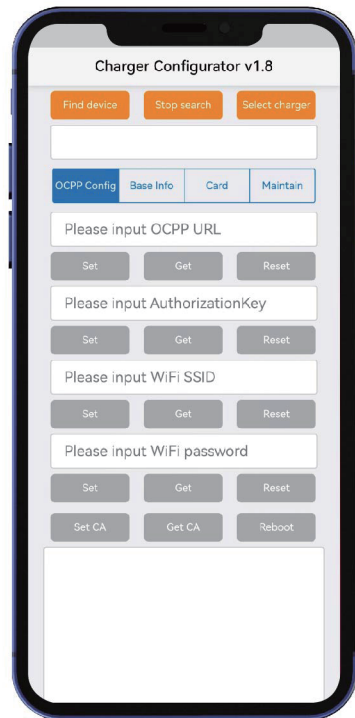


3 Search for bluetooth device (de fault password: Admin888)

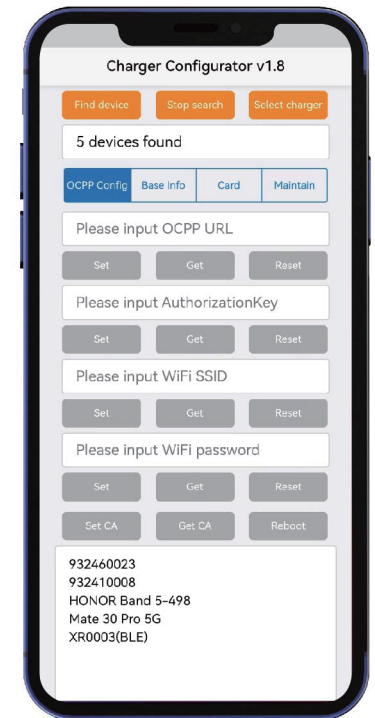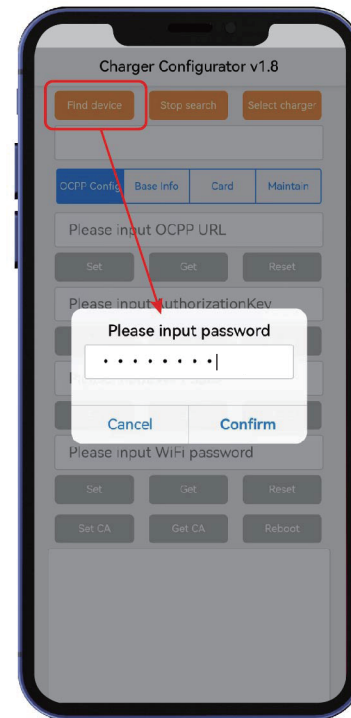

4

Select EV Charger, and connect the EV Charger

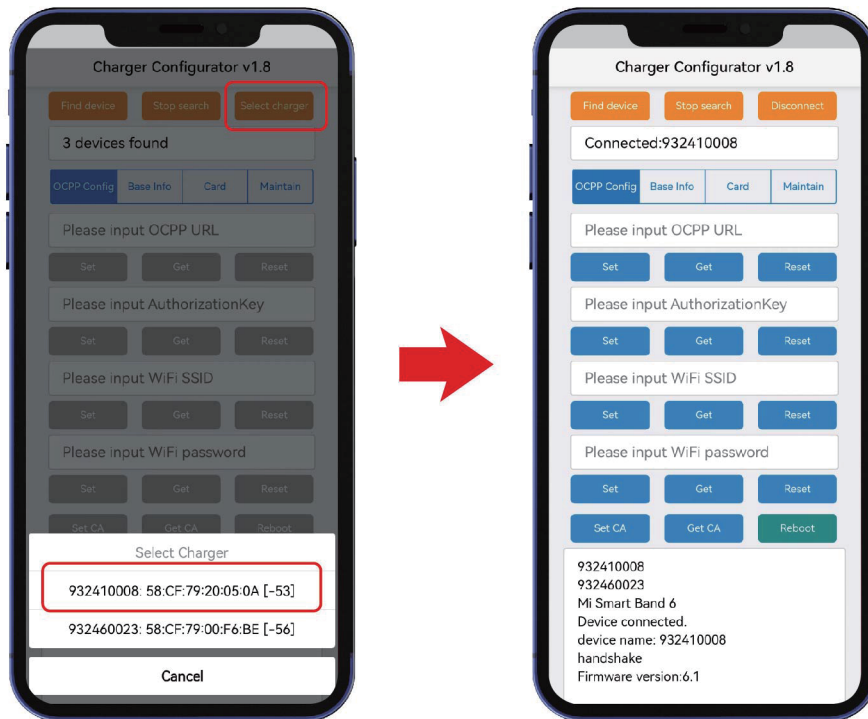

Software Instruction

Configure the OCPP server in the "OCPP Config" tab.

1

Enter OCPP URL (ex:wss://ocpp.io), click "Set"

2

Enter Authorization Key (The password is a 20-byte key), click "Set"

3

Enter WIFI SSID, click "Set". (Case sensitive for WIFI SSID)

4

Enter WIFI Password, click "Set"

5

Click "Reboot" to restart the EV Charger to take effect on the updated configuration information.

